

# ULTRABOND ECO FIX

Adhesive and fixative with high residual tack for loose-lay floorings



[www.blauer-engel.de/uz113](http://www.blauer-engel.de/uz113)



## WHERE TO USE

- Non-permanent fixing of loose-lay carpet tiles.
- Non-permanent fixing of loose-lay resilient floors.

### Some application examples

**Ultrabond Eco Fix** is used as an antislip fixing for:

- loose-lay carpet tiles;
- loose-lay PVC tiles with PVC latex mousse backing

#### ON

- all normal absorbent and non-absorbent substrates used in building sector as long as they are moisture-stable smooth and flat (screeds, levelling compounds, concrete, dry screeds etc.);
- existing floors of every type: wood, PVC, rubber, linoleum, ceramic, marble, etc;
- access panels and raised floors of every type;
- underfloor heating systems.

## TECHNICAL CHARACTERISTICS

**Ultrabond Eco Fix** is an adhesive based on acrylic resins in water dispersion, formulated as light cream coloured paste, easy to apply by roller or trowel.

When dry, the **Ultrabond Eco Fix** film has a residual tack that enables to remove and replace the loose-lay flooring easily.

**Warning:** if installing flooring on not perfectly dry **Ultrabond Eco Fix** (when it can still be transferred onto the back of the floor tiles) it has a permanent adhesive strength.

**Ultrabond Eco Fix** can be used in areas with heavy foot traffic and for exposure to castor wheels in compliance with EN 12529.

**Ultrabond Eco Fix** is not flammable with very low emissions of volatile organic compounds (EMICODE EC1 Plus). It can be stored with no particular precautions.

## RECOMMENDATIONS

- Install within the recommended temperature, normally between +15°C and +35°C.
- Do not install on damp substrates or substrates with possible rising damp.
- On very absorbent substrates, first apply a coat of a suitable primer (for instance **Primer G**, **Eco Prim T**, etc.) before applying **Ultrabond Eco Fix**.

## APPLICATION PROCEDURE

## Preparation of the substrate

Substrates must be dry, even, sound, mechanically strong, free of dust, loose particles, cracks, paint, wax, oil, rust, traces of gypsum or other material that can interfere with bonding.

The moisture content must comply with the local regulations.

It is essential to make sure there is no rising damp.

Unbonded screeds over light-weight concrete or over layers of insulation and screeds laid directly onto earth must be isolated by a vapour barrier to prevent rising damp.

**Ultrabond Eco Fix** can usually be applied directly to the surface of raised floors (in case of absorbent panels, the application of a suitable primer is recommended).

To repair cracks in the substrate, form fast-drying screeds and level uneven screeds, it is recommended to refer to the section in the MAPEI catalogue concerning the preparation of substrates or contact the Technical Advisory Department.

## Acclimatisation

Before installing, make sure the floor, the adhesive and the substrate are acclimatised to the recommended temperature and R.H.

## Spreading the adhesive

**Ultrabond Eco Fix** is applied with a notched trowel on the substrate where the loose-lay tiles are intended to be fixed and subsequently removed (in this case the tiles that are removed will remain free of adhesive).

When the substrate must remain clean, **Ultrabond Eco Fix** must be applied to the tile back.

Spread the adhesive with MAPEI notched trowel No. 1 or TKB A1, A4.

For the installation of carpet tiles on perfectly smooth floors (for example marble, PVC, raised floors, varnished wood, etc.), **Ultrabond Eco Fix** can be applied by roller, in this case it is necessary to dilute the adhesive with 20% water.

The dilution with water is recommended in case of not compact backings such as bitumen or fleece.

In both applications, it is essential to wait until complete evaporation of water. Waiting time can vary from 30 minutes to 12 hours depending on ambient temperature, type of substrate, dilution and quantity of adhesive spread.

The flooring has to be installed once the white coloured film of **Ultrabond Eco Fix** becomes transparent.

## Installing the flooring

*Follow the manufacturer's instruction for the method of installation.*

Position the floor and uniformly press the surface of the flooring.

Should the tackiness of **Ultrabond Eco Fix** diminish over time because of dust or other factors, it can be restored easily by applying a new coat.

## CLEANING

While still wet, **Ultrabond Eco Fix** can be cleaned from floors, tools, and clothing with water. When dry, use alcohol.

When dry, **Ultrabond Eco Fix** can be removed from substrates with **Pulicol 2000**.

## CONSUMPTION

Consumption varies with uniformity of substrate, the back of the flooring and installation method (roller or trowel).

Consumption: 80-150 g/m<sup>2</sup>.

## PACKAGING

**Ultrabond Eco Fix** is available in 10 and 5 kg buckets.

## STORAGE

Under normal conditions **Ultrabond Eco Fix** is stable for at least 12 months in its original sealed packaging. Avoid prolonged exposure to frost.

## SAFETY INSTRUCTIONS FOR THE PREPARATION AND APPLICATION

**Ultrabond Eco Fix** is not dangerous according to the current regulation regarding the classification of mixtures. During use wear protective gloves and goggles and to take the usual precautions for handling chemicals.

For further and complete information about the safe use of our product please refer to the latest version of our Safety Data Sheet.

Keep out of reach of children. Ensure good ventilation during and after application and drying. Avoid eating, drinking or smoking while processing this product. In case of contact with eyes or skin rinse immediately with plenty of water. Do not allow product to reach sewage system or any water course. Do not allow to penetrate the ground/soil. Clean tools with soap and water immediately after use. Only properly emptied containers may be recycled. Dried product residues can be disposed of as normal household waste. Product contains BIT and CIT/MIT (3:1).




For information for allergic people, please call at +39/02/37 67 3.1.

*The product contains:*

Dispersion vehicle, inorganic fillers, polymer dispersion, tackifier, preservatives (Vdl-RL 01/June 2018).

PRODUCT FOR PROFESSIONAL USE.

TECHNICAL DATA (typical values)	
PRODUCT IDENTITY	
Consistency:	creamy paste
Colour:	light beige
Density (g/cm <sup>3</sup> ):	1.07
pH:	8.5
Brookfield viscosity (mPa·s):	40 000 (6 rotors - 20 rpm)
Dry solids content (%):	71
– EMICODE: – Blauer Engel:	EC1 Plus - very low emission DE-UZ 113 For further information refer to the Safety Data Sheet
APPLICATION DATA at +23°C - 50% R.H.	
Application temperature range:	from +15°C to +35°C
Waiting time:	install once the adhesive becomes transparent from 30 minutes to 12 hours depending on the adhesive quantity, dilution of the adhesive and the type of substrate
Set to light foot traffic:	immediately after installation
Ready for use:	immediately after installation
FINAL PERFORMANCE	
Resistance to castor chair stress:	good
Underfloor heating systems:	suitable
Resistance to moisture:	good
Resistance to ageing:	excellent

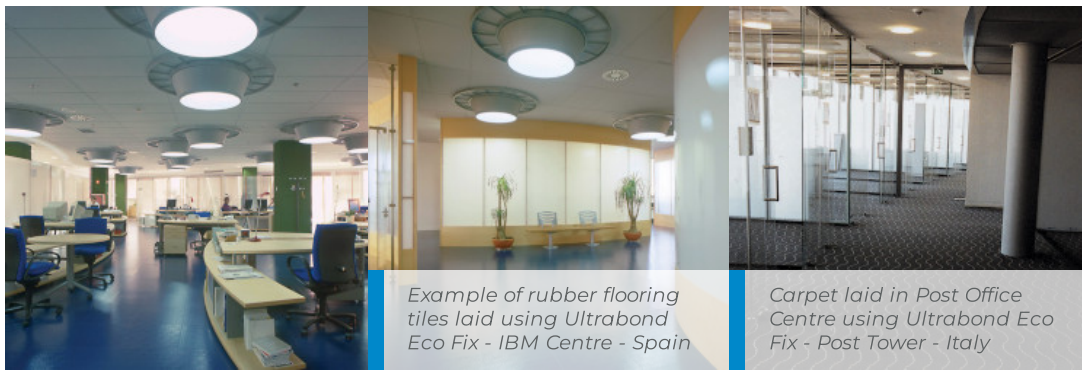

Example of rubber flooring  
tiles laid using Ultrabond  
Eco Fix - IBM Centre - Spain

Carpet laid in Post Office  
Centre using Ultrabond Eco  
Fix - Post Tower - Italy

## WARNING

*Although the technical details and recommendations contained in this product data sheet correspond to the best of our knowledge and experience, all the above information must, in every case, be taken as merely indicative and subject to confirmation after long-term practical application; for this reason, anyone who intends to use the product must ensure beforehand that it is suitable for the envisaged application. In every case, the user alone is fully responsible for any consequences deriving from the use of the product.*

**Please refer to the current version of the Technical Data Sheet, available from our website [www.mapei.com](http://www.mapei.com)**

## LEGAL NOTICE

*The contents of this Technical Data Sheet ("TDS") may be copied into another project-related document, but the resulting document shall not supplement or replace requirements per the TDS in force at the time of the MAPEI product installation.*

*The most up-to-date TDS can be downloaded from our website [www.mapei.com](http://www.mapei.com).*

**ANY ALTERATION TO THE WORDING OR REQUIREMENTS CONTAINED OR DERIVED FROM THIS TDS EXCLUDES THE RESPONSIBILITY OF MAPEI.**

**KEVMOR**  
TRADE SUPPLIES

### **Kevmor Trade Supplies**

11 Belmont Avenue, Belmont WA 6104

P: 08 9277 7177

E: [sales@kevmor.com.au](mailto:sales@kevmor.com.au)

W: [kevmor.com.au](http://kevmor.com.au)

**214-6-2019-gb**

Any reproduction of texts, photos and illustrations published here is prohibited and subject to prosecution

